

Shutters:


2C) Apply the shutters by removing the backing from each one and applying them to each side of the windows. Note that there are 3 sizes of shutters to match the window dimensions and that only the front and sides of the house receive shutters, the rear does not.

Eaves and subroofing:


3A) Glue the eaves into the tabs in the front and rear walls as shown. Note the lower eaves have small sections that wrap around the walls (see diagram).

3B) Glue the two upper sections of subroofing into place onto the tabs on the end walls as shown.


3C) (NOTE: Because of the narrow width of the pieces and difficult access once installed you may find it easier to apply the roofing shingles - see step 10 - to the lower roof pieces before you apply them to the house). Now glue the lower sub roof panels to the lower roof eaves and to the edges of the upper roof panels you just installed (see diagram).

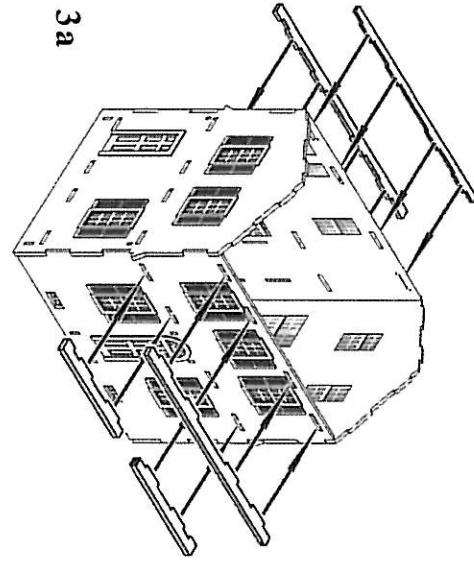

3a

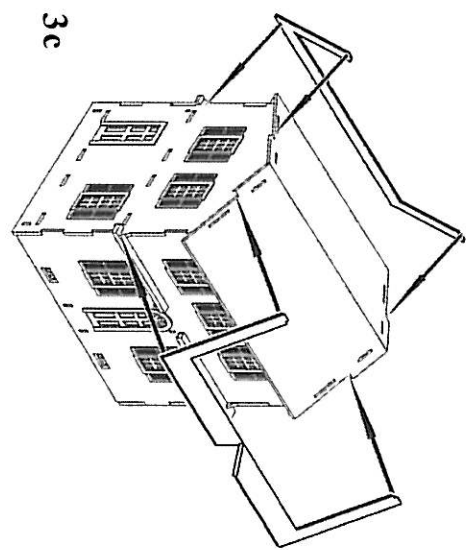

3c

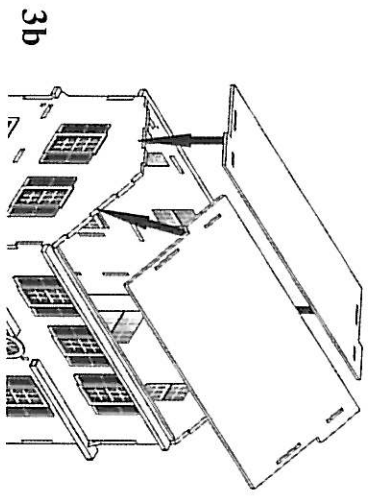


3b


Side porch:

4A) Glue the lower deck supports into the two outer slots in the end wall of the house. Now glue the long support wall onto these..

4B) Glue the flooring into the slots in the end wall and to the tabs on the tops of the lower supports. Now glue the upright posts into place followed by the two upper side rails which will glue to both the end wall and the top of the porch uprights.

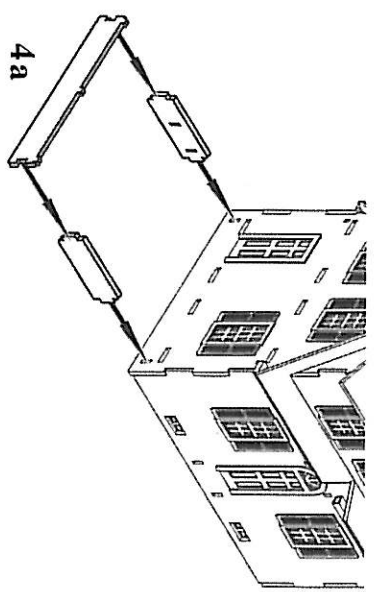

4a

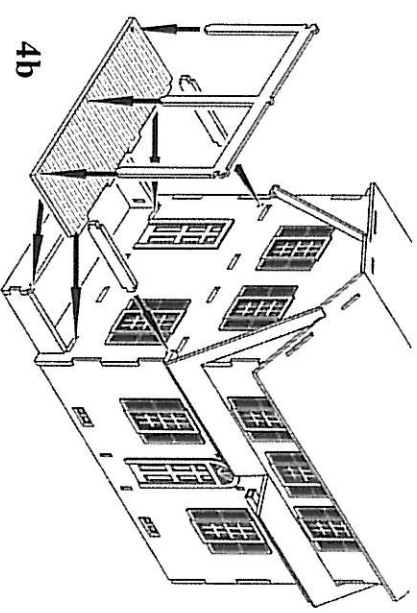

4b